



Thank you for choosing PROMATS
1-800-678-6287 – Colorado
1-800-617-7125 – North Carolina

Installation Guide for Field Cutout

Basic Steps for professional looking cutouts every time!

- Determine cutout location on the plywood and directly on the vinyl in front.
- Carefully cut plywood (jigsaw) and foam to the correct size without cutting the vinyl.
- **Figure 1** illustrates how to cut the vinyl (dotted line).
Note the dotted cutting line in Figure 2 for cutouts at the edge of the pad.
- Cut a strip of vinyl slightly larger than the cutout.
- Place strip under the triangular shaped pieces.
- Fold the triangular shape pieces toward the back of pad.
- HH66 Vinyl to Vinyl Cement may be used to tack edges down.
- Position and staple the flaps to the backside of pad.



Figure 1

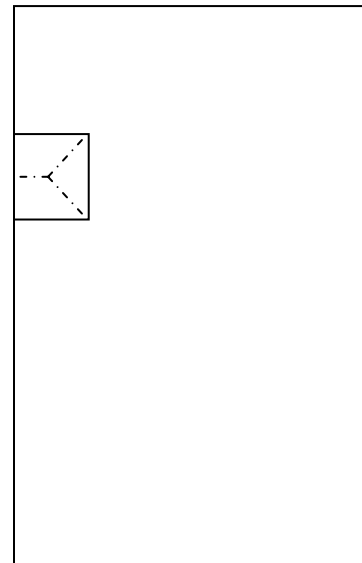
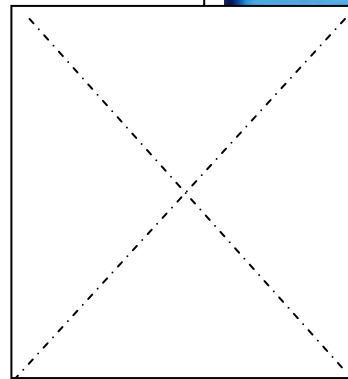


Figure 2