




## WC Series Wall Pad (1" Lip / top & bottom)

### Basic Steps for Installing Model: WC Series Wall Pad 1" Lip / Top & Bottom

- 1.) Layout all the pads to assure correct number and where odd size panels go. If cut-out pads are applicable, check fit and those pads will go up first. Determine Height above finished floor. Example: The pads are 6' in height and you want to install 4" above the floor to allow for tile molding. The top of the pad will be at 76 inches.
- 2.) In this case, mark 76" from the floor in two locations and snap a chalk line between the two marks. Making sure that the line is level using bubble level, etc.
- 3.) Hold the wall pad to the established line and install with the appropriate fastener for your wall type through the top 1" lip. Pads are fastened similarly at the bottom. Four fasteners per pad (2 @ top, 2 @ bottom) should be sufficient to hold the pad in place under normal conditions. Using Nickel Plated Finish Washers will provide a more finished appearance and curtail "twisting" of the vinyl by the head of the fastener.
- 4.) Install "cutout" panels and column pads first (if applicable) then move out to ends of walls. When adjacent to doors, allow 1" min. spacing from edge of door. Plumb vertically and horizontally first and every panel.

#### Rawl TAPCON®

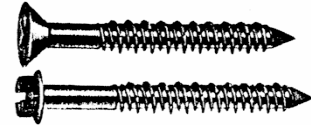

Tapcon is a registered trademark of Illinois Tool Works.


Use in: Concrete, block, brick.

Use with: Nickel Finish Washer # 14 prevents vinyl from twisting under the screw head.

Made of: Case hardened carbon steel, zinc chromate finish (ASTM B633)

Recommended Size:

¼" x 1 ¾" length Flat Head/ Phillips

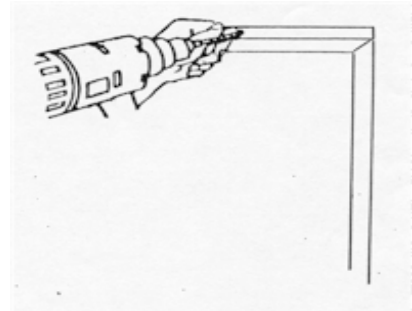

Thank You for choosing PROMATS !  
1-800-678-6287